


NanoVNA Menu Structure Map

HOME MENU

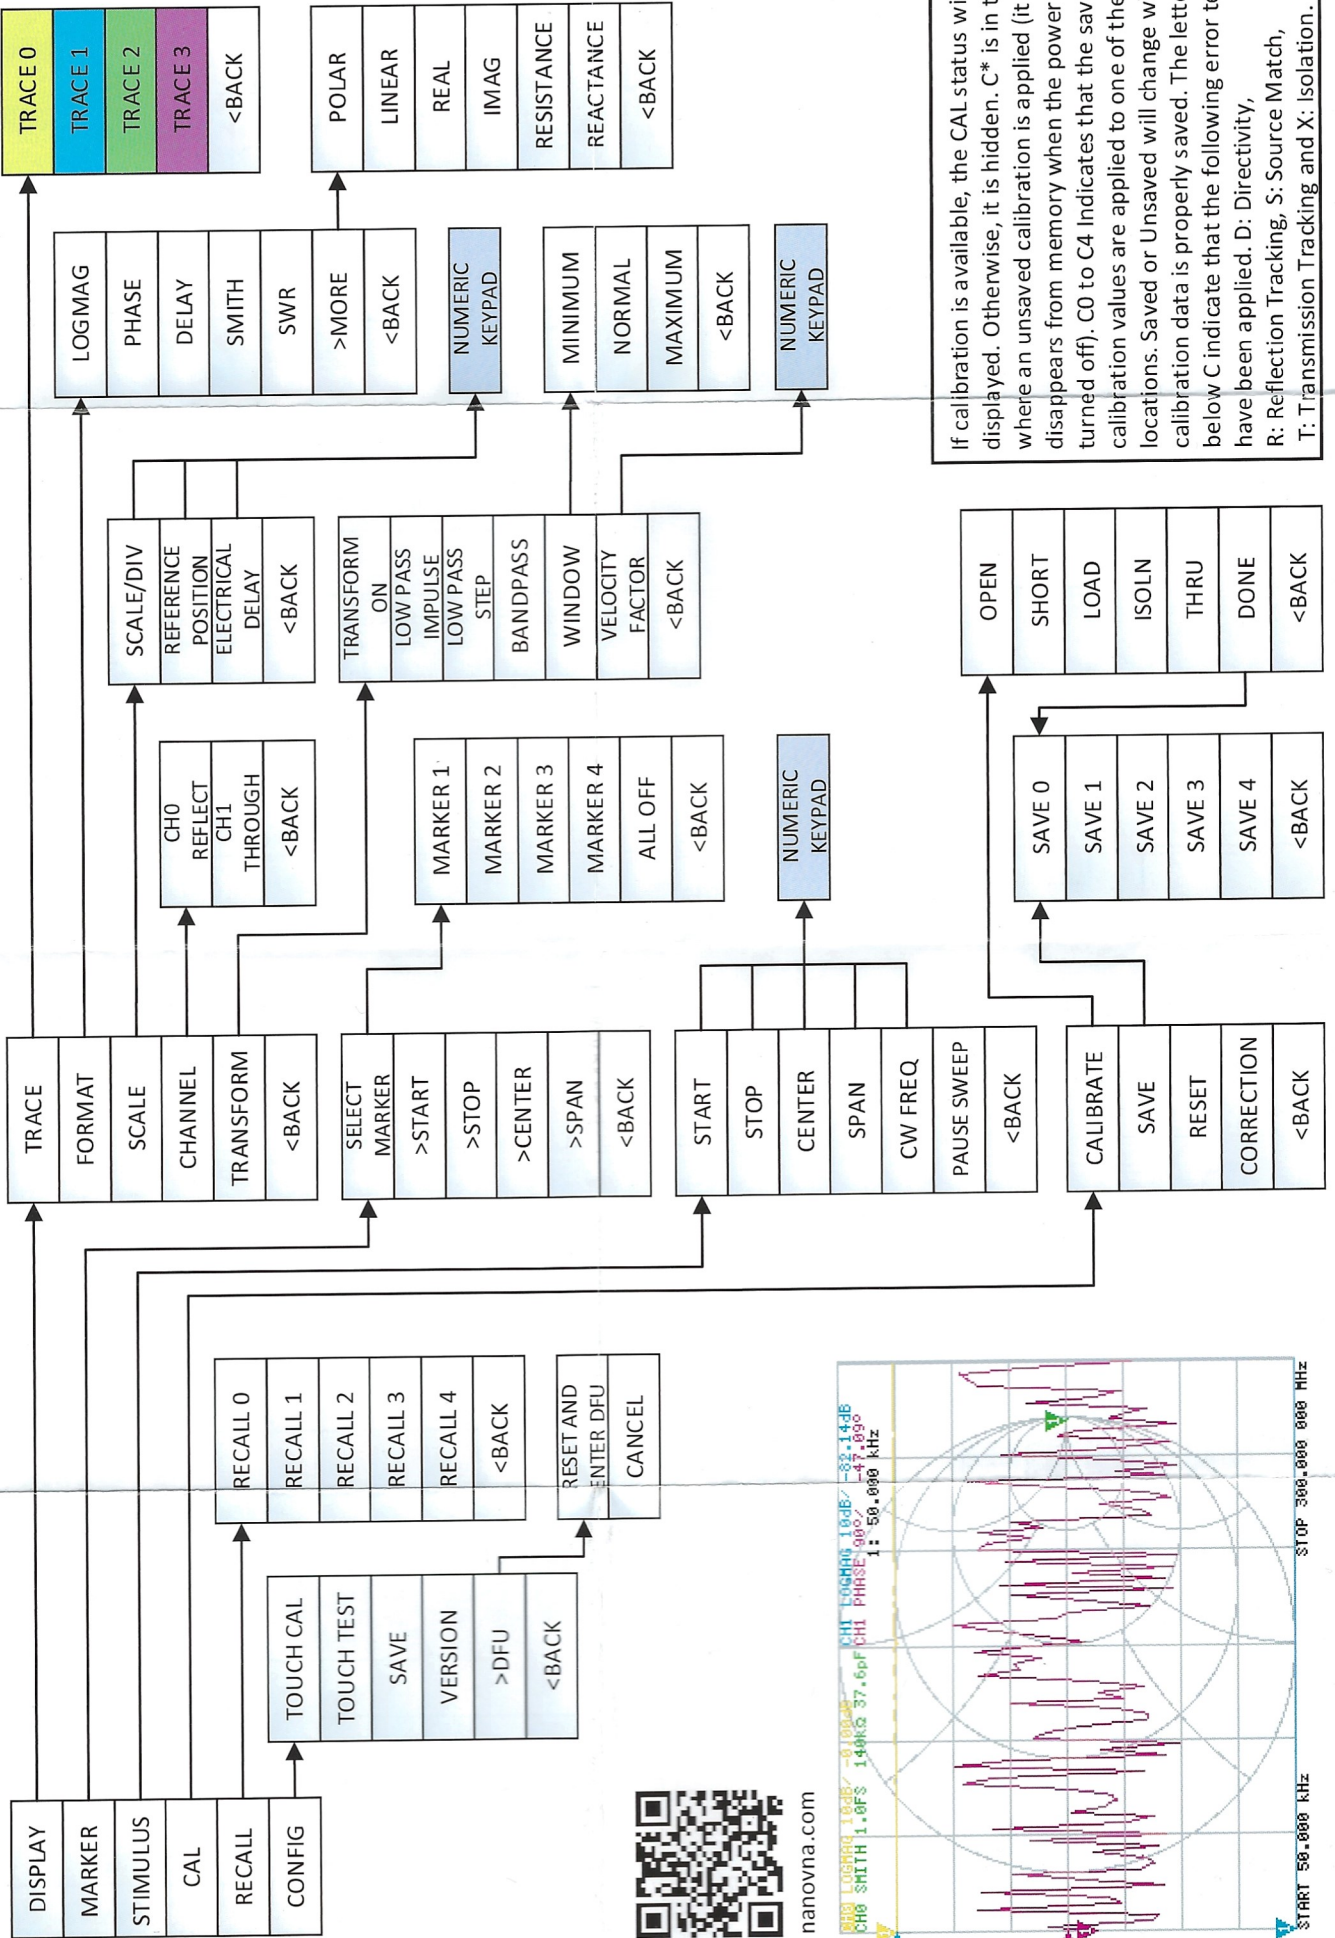

If calibration is available, the CAL status will be displayed. Otherwise, it is hidden. C* is in the state where an unsaved calibration is applied (it disappears from memory when the power is turned off). C0 to C4 indicates that the saved calibration values are applied to one of the save locations. Saved or Unsaved will change when calibration data is properly saved. The letters below C indicate that the following error terms have been applied. D: Directivity, R: Reflection Tracking, S: Source Match, T: Transmission Tracking and X: Isolation.



nanovna.com

